



Комплект LYNX - Защита картера



Инструкция

Рысь

27 июля 2026 г.
Версия В

487804416

Время выполнения: 0,70 часа

Защита картера

В данном документе могут использоваться следующие символы:

 ОПАСНОСТЬ

Указывает на опасную ситуацию, которая, если ее не избежать, приведет к смерти или серьезным травмам.

 ПРЕДУПРЕЖДЕНИЕ

Указывает на опасную ситуацию, которая, если ее не избежать, может привести к смерти или серьезным травмам.

 ОСТОРОЖНОСТЬ

Указывает на опасную ситуацию, которая, если ее не избежать, может привести к легким или умеренным травмам.

УВЕДОМЛЕНИЕ

Указывает на инструкцию, несоблюдение которой может привести к серьезному повреждению компонентов транспортного средства или другого имущества.

 ПРЕДУПРЕЖДЕНИЕ

- Данный комплект предназначен только для определенных моделей (авторизованные дилеры BRP подтвердят модель(и)). Не рекомендуется использовать его с устройствами, отличными от тех, для которых он был продан.
- Если для установки комплекта требуется шаблон, убедитесь, что шаблон соответствует масштабу.
- Если при разборке/сборке требуется снять фиксирующее устройство (например, защелки, самозащелки и т. д.), всегда заменяйте его новым.
- Необходимо строго соблюдать технические требования к затяжке динамометрическим ключом.
- При работе с электроинструментами всегда надевайте ЗАЩИТНЫЕ ОЧКИ И СООТВЕТСТВУЮЩИЕ ПЕРЧАТКИ.
- Всегда обращайте внимание на движущиеся части, такие как колеса, компоненты трансмиссии и т. д.
- Некоторые компоненты могут быть горячими. Всегда дожидайтесь, пока все компоненты остынут, прежде чем приступить к работе.
- Если не указано иное, двигатель должен быть выключен при выполнении любых операций с транспортным средством.

 ПРЕДУПРЕЖДЕНИЕ

В данном листе инструкций может содержаться важная информация по технике безопасности и/или инструкции по эксплуатации, предназначенные для конечного пользователя. Обязательно укажите клиенту номер детали комплекта, а также лист инструкций, входящий в комплект. Убедитесь, что клиент имеет доступ ко всей необходимой информации для правильного использования аксессуара.

 Примечание

Если не указано иное, используйте моменты затяжки, указанные в следующей таблице.


—	ОЦЕНКА			
—	5.8	8.8	10.9	12.9
M4	1,8 Н•м ± 0,2 Н•м	2,8 Н•м ± 0,2 Н•м	3,8 Н•м ± 0,2 Н•м	4,5 Н•м ± 0,5 Н•м
	(16 фунто-дюймов ± 2 фунто-дюймов)	(25 фунто-дюйм ± 2 фунто-дюйм)	(34 фунта•дюйм ± 2 фунта•дюйм)	(40 фунто-дюймов ± 4 фунто-дюймов)
M5	3,3 Н•м ± 0,2 Н•м	5 Н•м ± 0,5 Н•м	7,8 Н•м ± 0,7 Н•м	9 Н•м ± 1 Н•м
	(29 фунто-дюйм ± 2 фунто-дюйм)	(44 фунта•дюйм ± 4 фунта•дюйм)	(69 фунто-дюйм ± 6 фунто-дюйм)	(80 фунто-дюймов ± 9 фунто-дюймов)
M6	7,5 Н•м ± 1 Н•м	10 Н•м ± 2 Н•м	12,8 Н•м ± 2,2 Н•м	16 Н•м ± 2 Н•м
	(66 фунто-дюйм ± 9 фунто-дюйм)	(89 фунто-дюймов ± 18 фунто-дюймов)	(113 фунт-дюймов ± 19 фунт-дюймов)	(142 фунта на дюйм ± 18 фунтов на дюйм)
M8	15,3 Н•м ± 1,7 Н•м	24,5 Н•м ± 3,5 Н•м	31,5 Н•м ± 3,5 Н•м	40 Н•м ± 5 Н•м
	(135 фунто-дюймов ± 15 фунто-дюймов)	(18 фунт-фут ± 3 фунт-фут)	(23 фунт-фут ± 3 фунт-фут)	(30 фунт-фут ± 4 фунт-фут)
M10	29 Н•м ± 3 Н•м	48 Н•м ± 6 Н•м	61 Н•м ± 9 Н•м	73 Н•м ± 7 Н•м
	(21 фунт•фут ± 2 фунт•фут)	(35 фунт-фут ± 4 фунт-фут)	(45 фунт-фут ± 7 фунт-фут)	(54 фунт-фут ± 5 фунт-фут)
M12	52 Н•м ± 6 Н•м	85 Н•м ± 10 Н•м	105 Н•м ± 15 Н•м	128 Н•м ± 17 Н•м
	(38 фунт-фут ± 4 фунт-фут)	(63 фунт-фут ± 7 фунт-фут)	(77 фунт-фут ± 11 фунт-фут)	(94 фунт-фут ± 13 фунт-фут)
M14	85 Н•м ± 10 Н•м	135 Н•м ± 15 Н•м	170 Н•м ± 20 Н•м	200 Н•м ± 25 Н•м
	(63 фунт-фут ± 7 фунт-фут)	(100 фунт-фут ± 11 фунт-фут)	(125 lbf•ft ± 15 lbf•ft)	(148 lbf•ft ± 18 lbf•ft)
M16	126 Н•м ± 14 Н•м	205 Н•м ± 25 Н•м	255 Н•м ± 30 Н•м	305 Н•м ± 35 Н•м
	(93 lbf•ft ± 10 lbf•ft)	(151 lbf•ft ± 18 lbf•ft)	(188 lbf•ft ± 22 lbf•ft)	(225 lbf•ft ± 26 lbf•ft)
M18	170 Н•м ± 20 Н•м	273 Н•м ± 32 Н•м	330 Н•м ± 25 Н•м	413 Н•м ± 47 Н•м
	(125 lbf•ft ± 15 lbf•ft)	(201 lbf•ft ± 24 lbf•ft)	(243 lbf•ft ± 18 lbf•ft)	(305 lbf•ft ± 35 lbf•ft)

 Note

The illustrations in this document show typical construction of the different assemblies and may not reproduce the full detail or exact shape of the parts; however, they represent parts that have the same or similar function. In the pictures below, parts may have been removed for clarity purposes.

ICON LEGEND


ICON

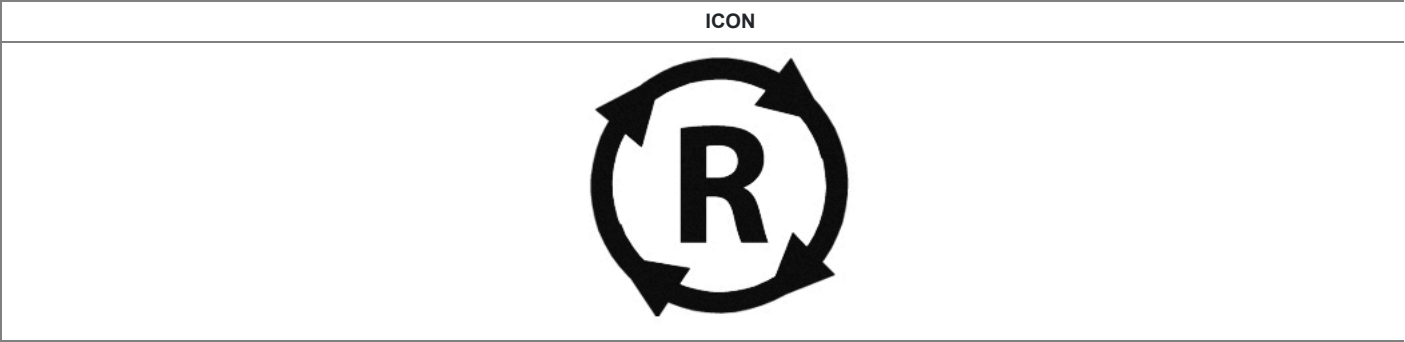REQUIRED TOOLS


REQUIRED TOOL			USE
T1	5 mm (3/16 in) Drill Bit		To drill holes on skidplates
T2	8 mm (5/16 in) Drill Bit		
T3	9.2 mm (23/64 in) Drill Bit		
T4	Hand rivet nut tool (or similar)		To install jack nuts

PARTS TO BE INSTALLED

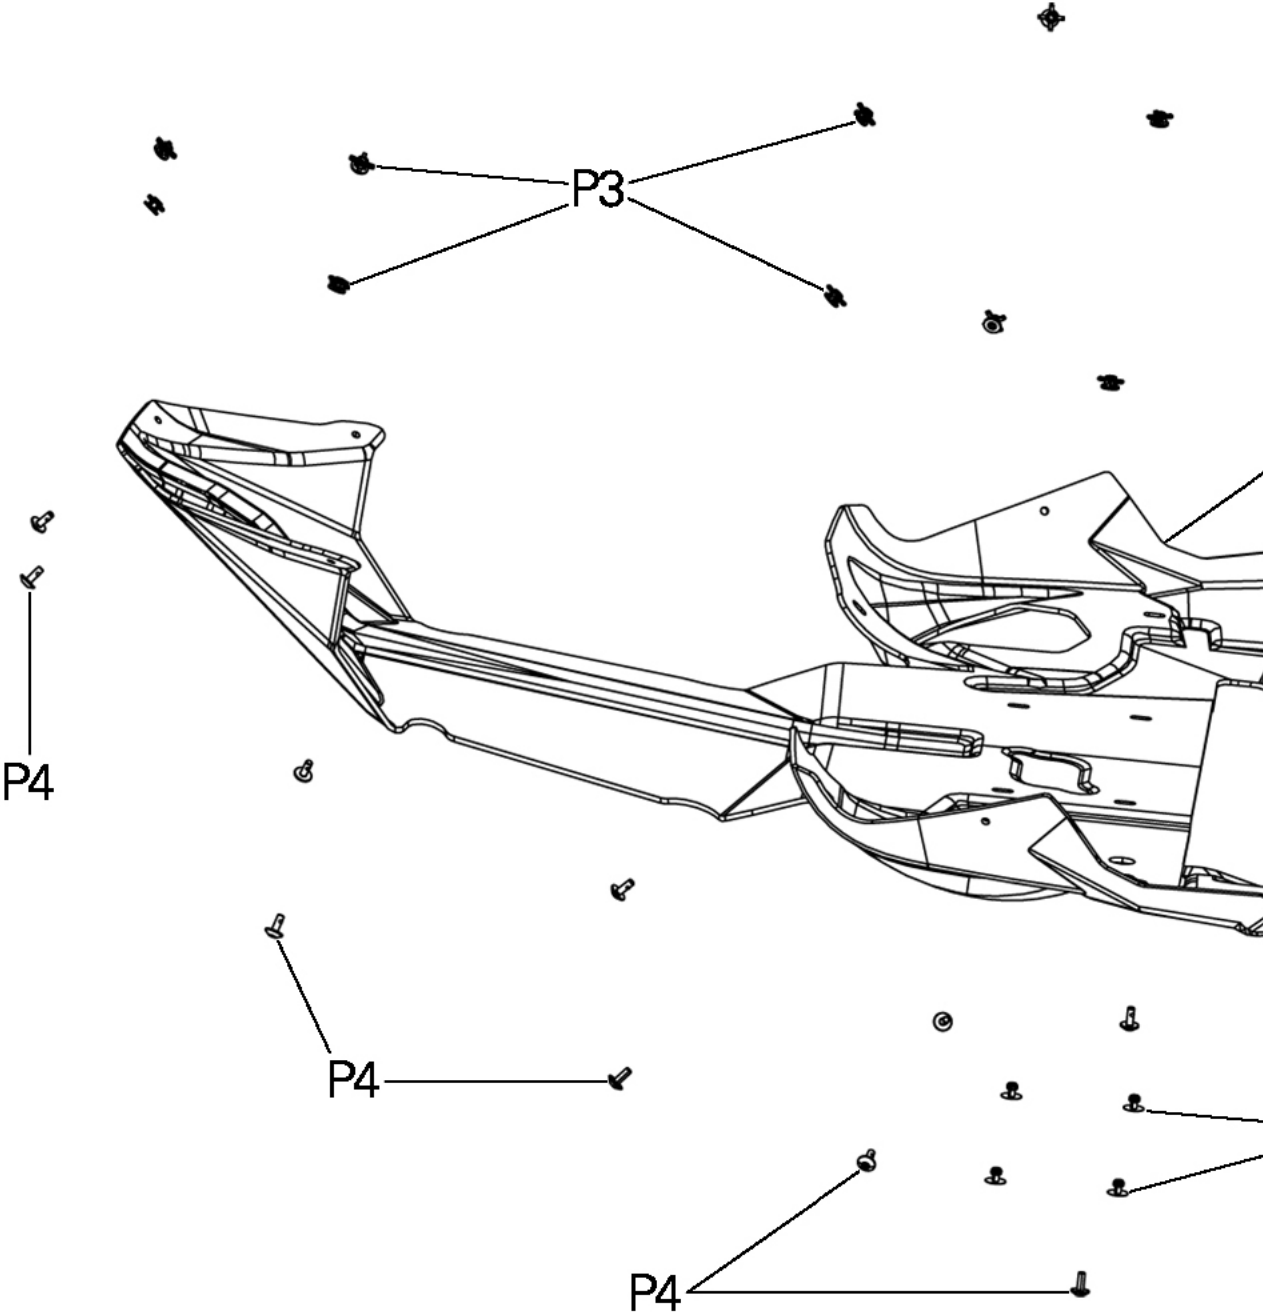


860202991 Kit

ITEM	DESCRIPTION	PART NUMBER	QTY
P1	Full skid plate	Not available separately	1
P2	3/16 X 0.675 Pop rivet	293150108	8
P3	M5 Jack nut	250100035	10
P4	M5 X 14 Torx screw	250000941	10

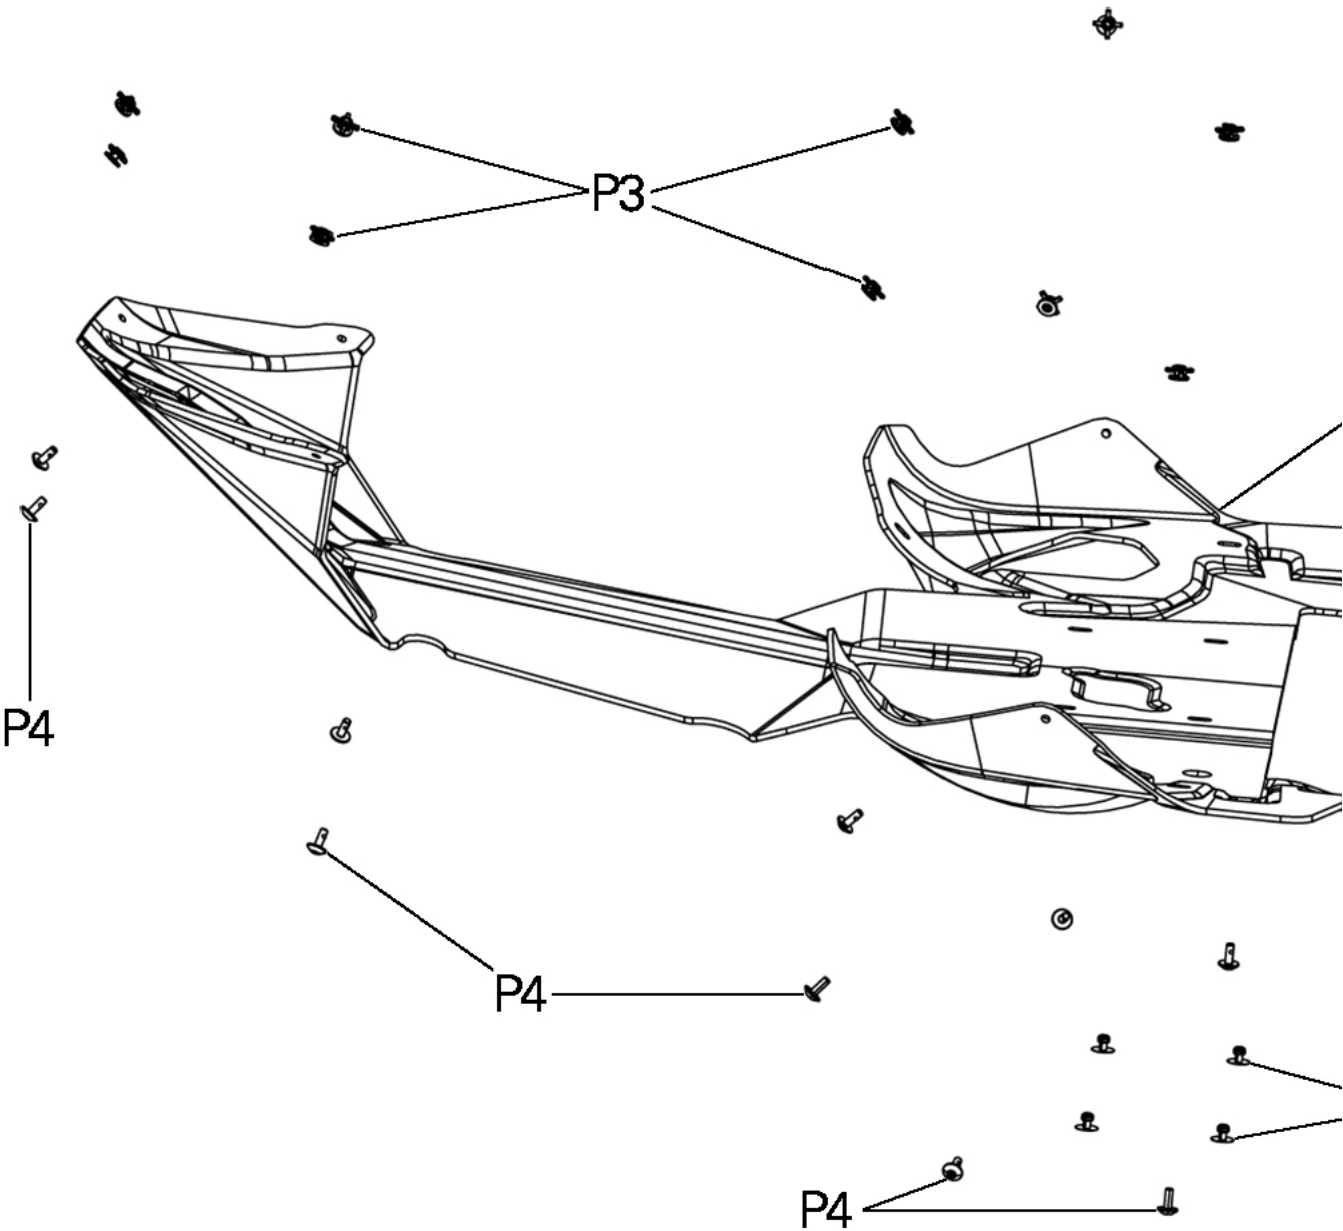


860202971 Kit

ITEM	DESCRIPTION	PART NUMBER	QTY
P1	Full skid plate	Not available separately	1
P2	Black 3/16 X 0.675 Pop rivet	293150108	6
P3	M5 Jack nut	250100035	10
P4	M5 X 14 Torx screw	250000941	10

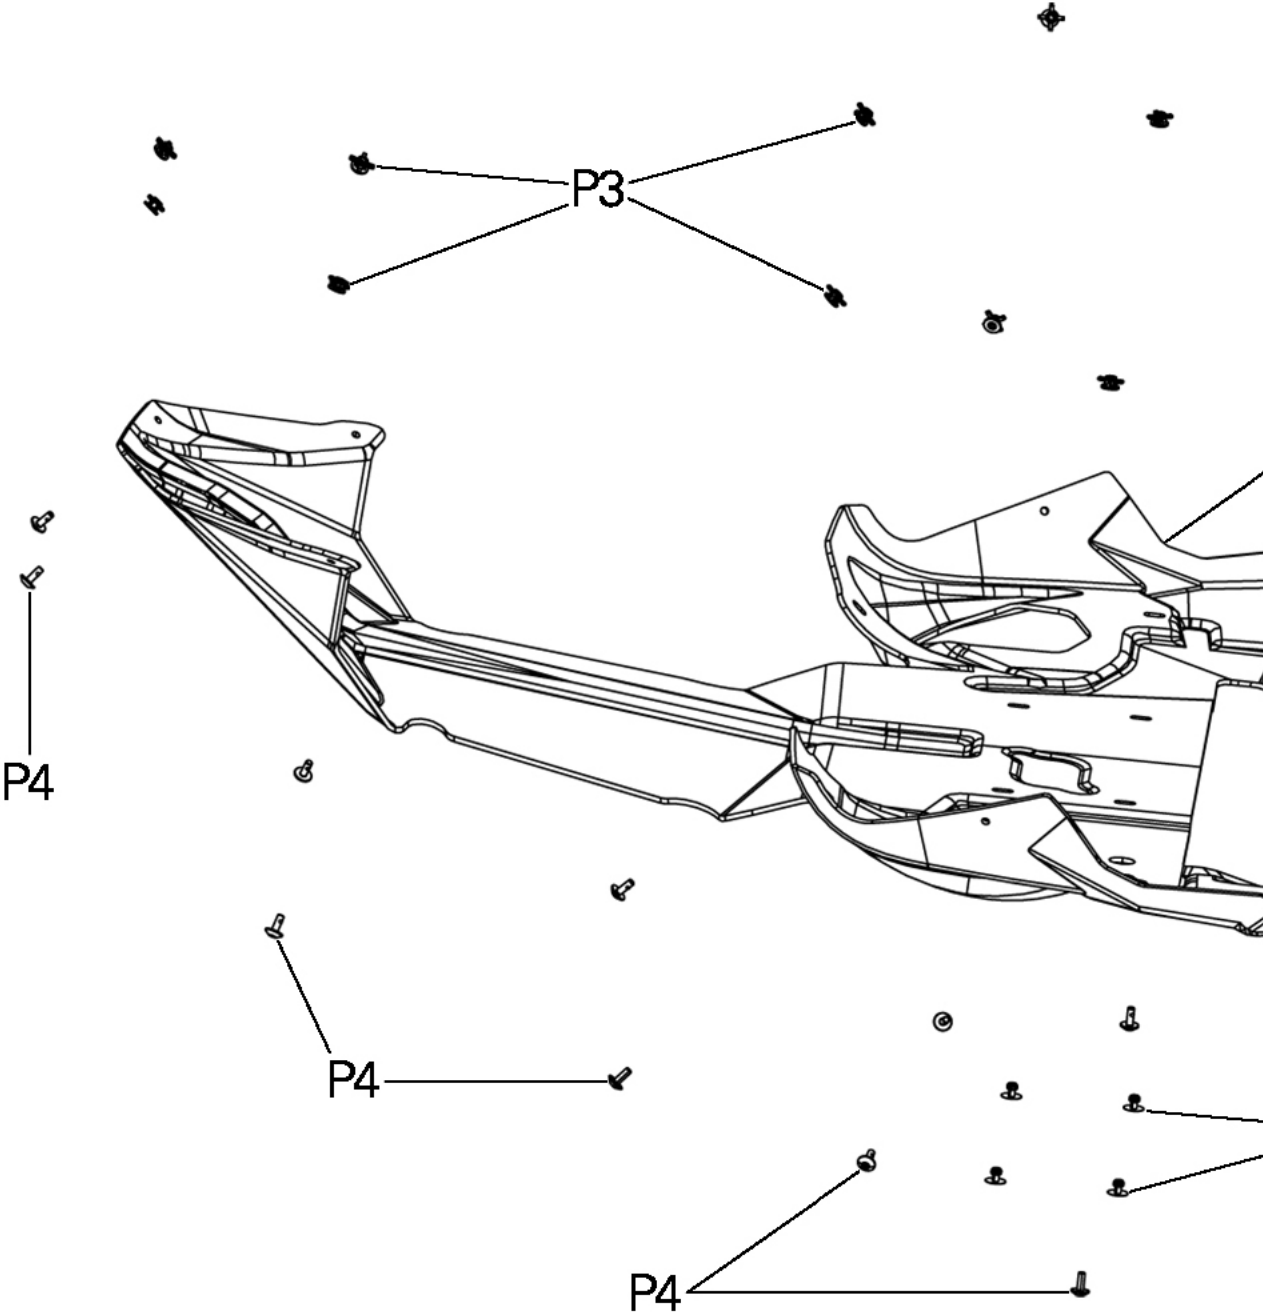

860202992 Kit

ITEM	DESCRIPTION	PART NUMBER	QTY
P1	Full skid plate	Not available separately	1
P2	Black 3/16 X 0.675 Pop rivet	293150108	8
P3	M5 Jack nut	250100035	10
P4	M5 X 14 Torx screw	250000941	10

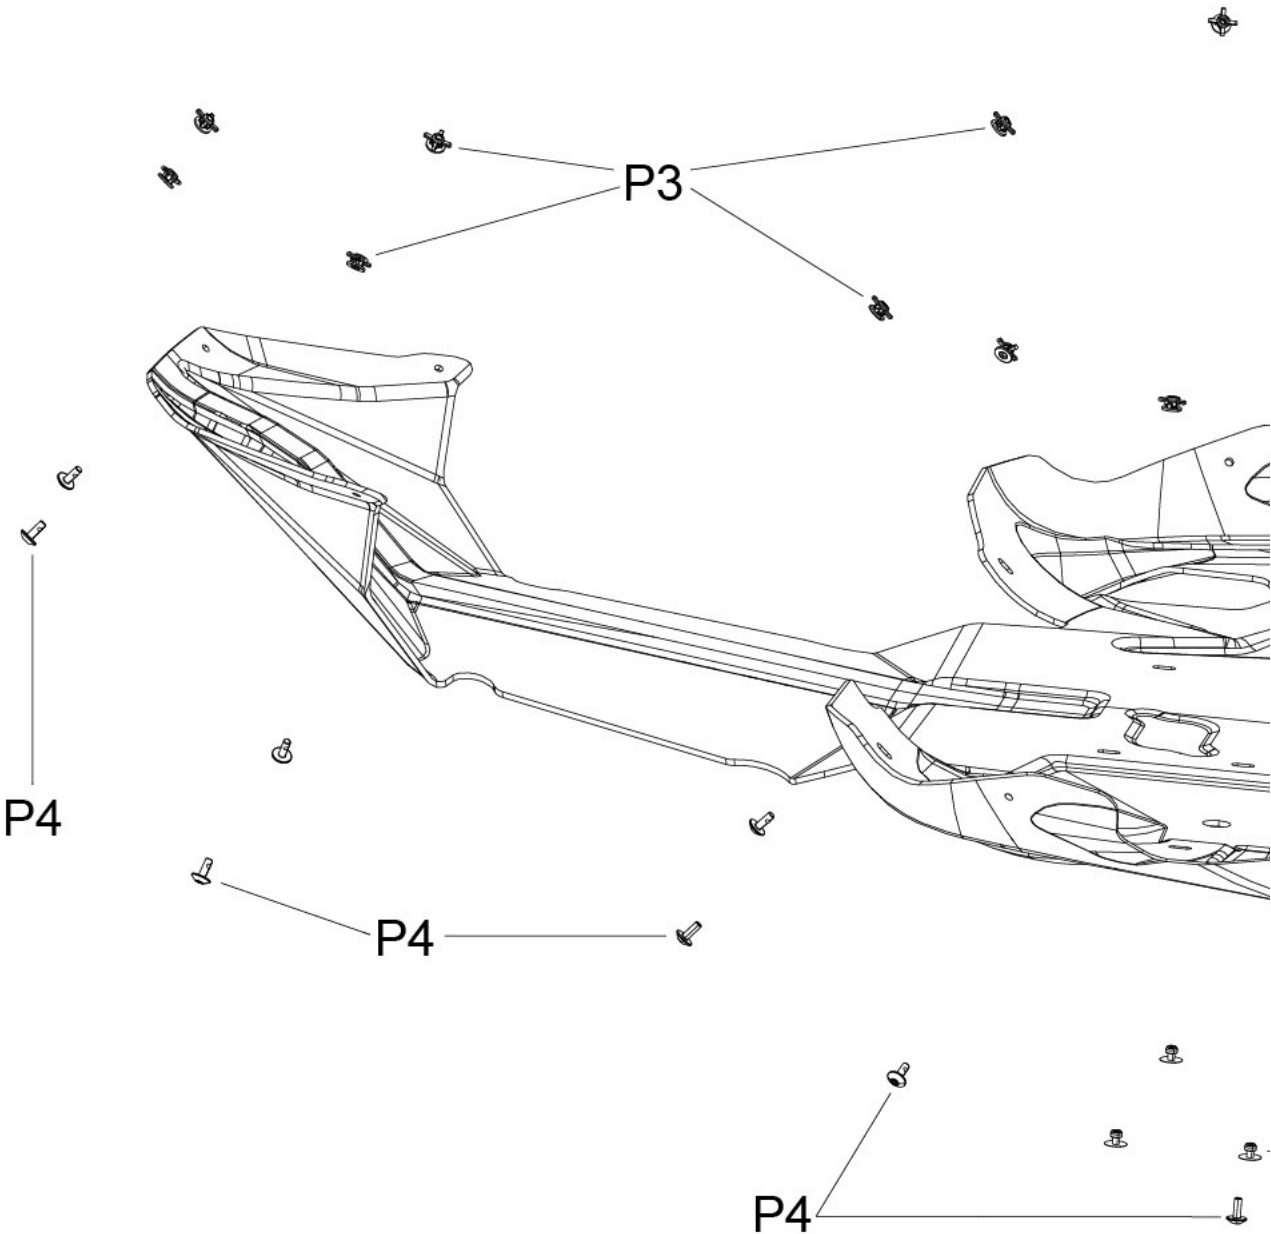

860203048 Kit


ITEM	DESCRIPTION	PART NUMBER	QTY
P1	Full skid plate	Not available separately	1
P2	Black 3/16 X 0.675 Pop rivet	293150308	8
P3	M5 Jack nut	250100035	10
P4	M5 X 14 Torx screw	250000941	10

VEHICLE PREPARATION


1. Remove and keep the lower part of the front bumper (860202714) if installed on the vehicle.

 **Note**

If the vehicle is equipped with front bumper (860202817 or 860203011), remove and keep the painted bumper (refer to 487804221 instruction sheet).

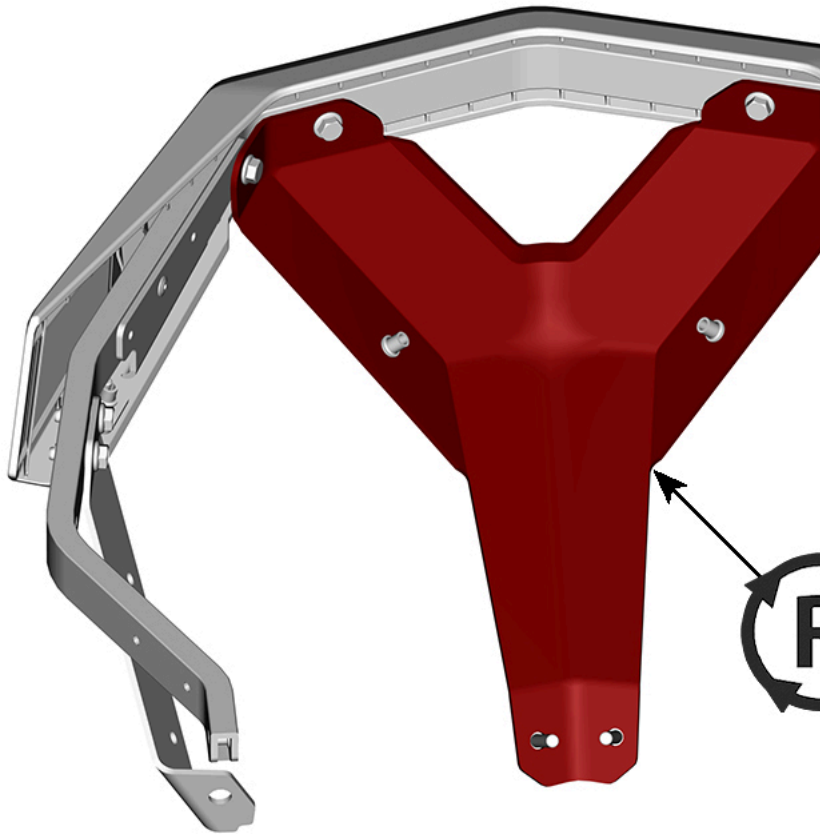


2. Remove and keep the protection plate if installed on the vehicle.

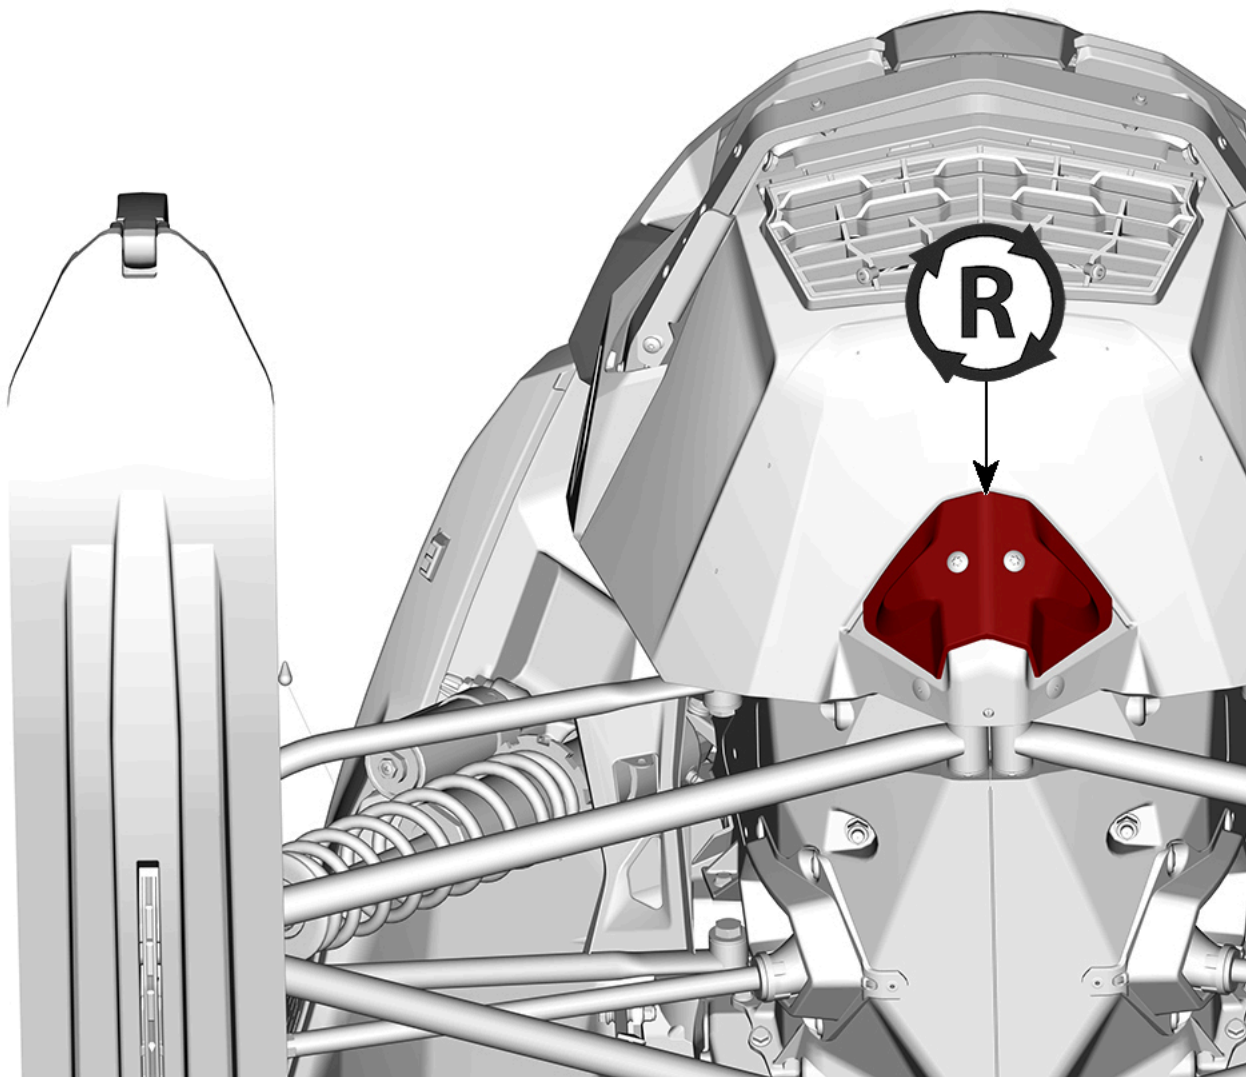

INSTALLATION INSTRUCTIONS

1. If the vehicle is equipped with a front bumper that attaches on the bottom pan, place the front bumper on the skid plate as depicted below and mark the two (2) indicated holes.

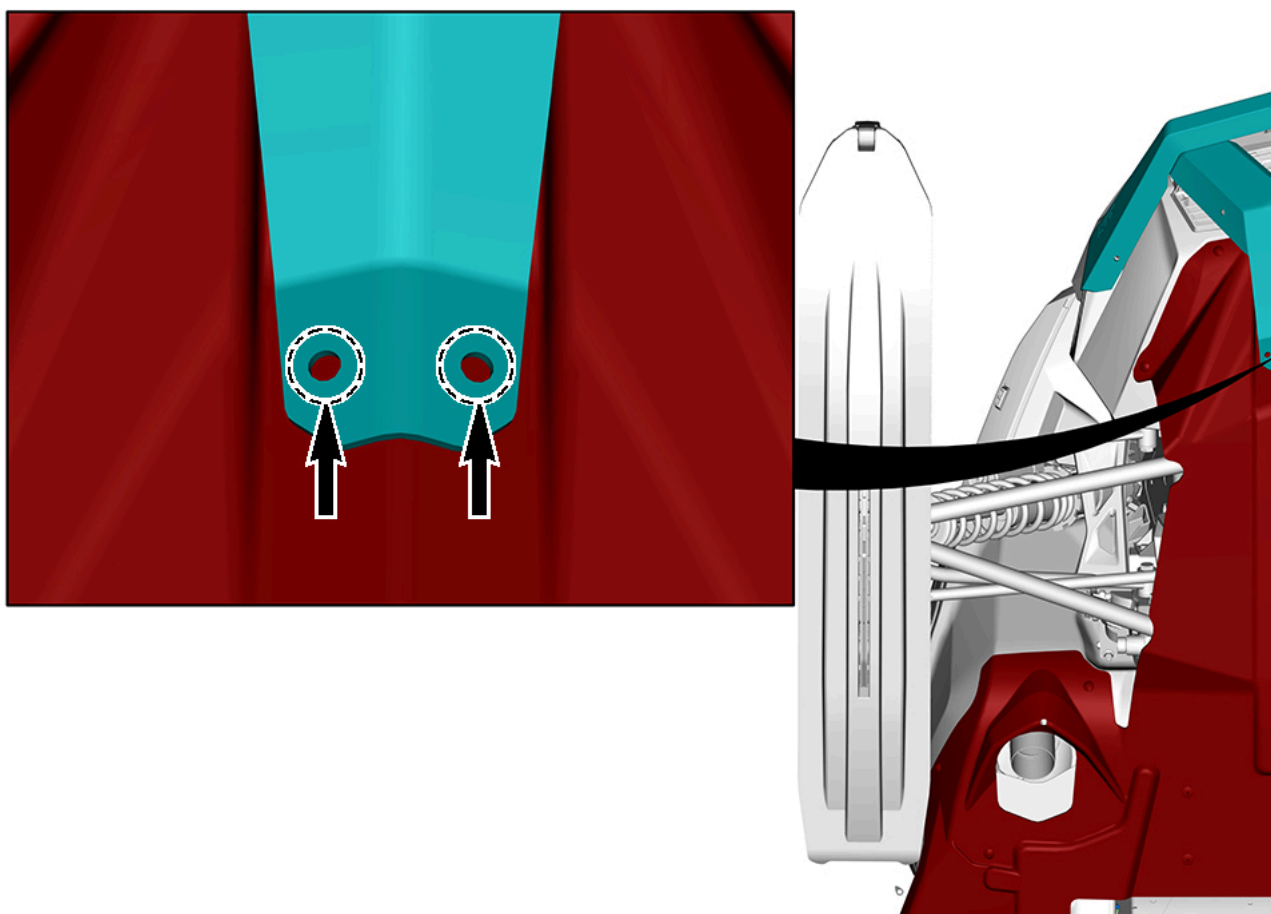


2. First use a 5 mm (3/16 in) drill bit to drill marked holes, then drill the same holes with a 8 mm (5/16 in) drill bit.

 Note

DO NOT drill too far to avoid damage on other components.


3. Remove and discard these two (2) rivets (for kit P/N 860202971, P/N 860202991, P/N 860202992 only).

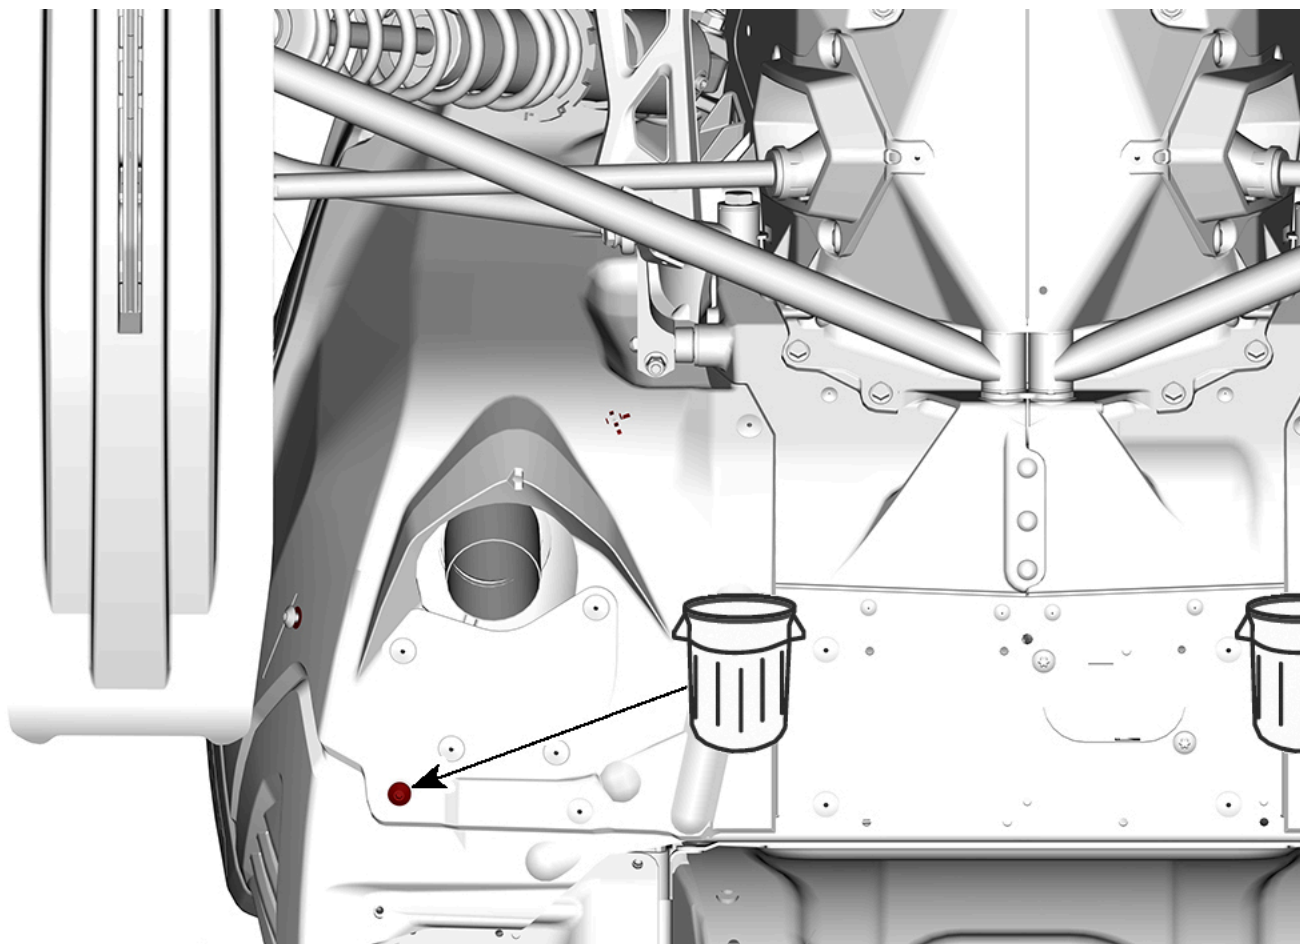


4. First use a 5 mm (3/16 in) drill bit to drill the indicated holes, then drill the same holes with a 9.2 mm (23/64 in) drill bit.

 Note


DO NOT drill too far to avoid damage on other components.

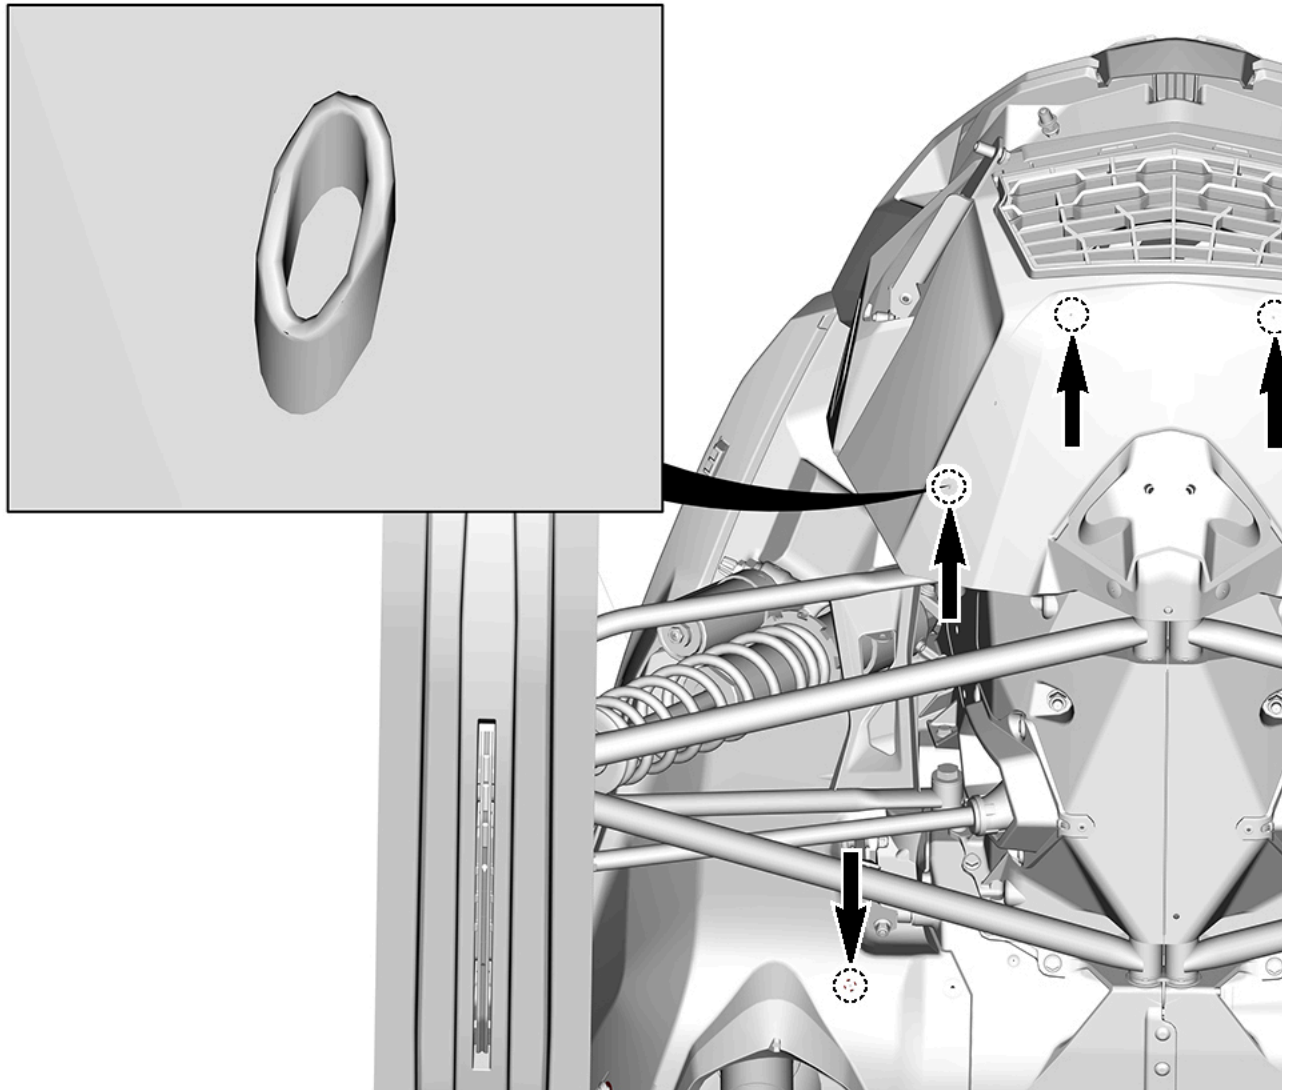


5. Place the skid plate [P1] and mark these two (2) holes (four (4) holes for kit P/N 860203048), then put the skid plate away.

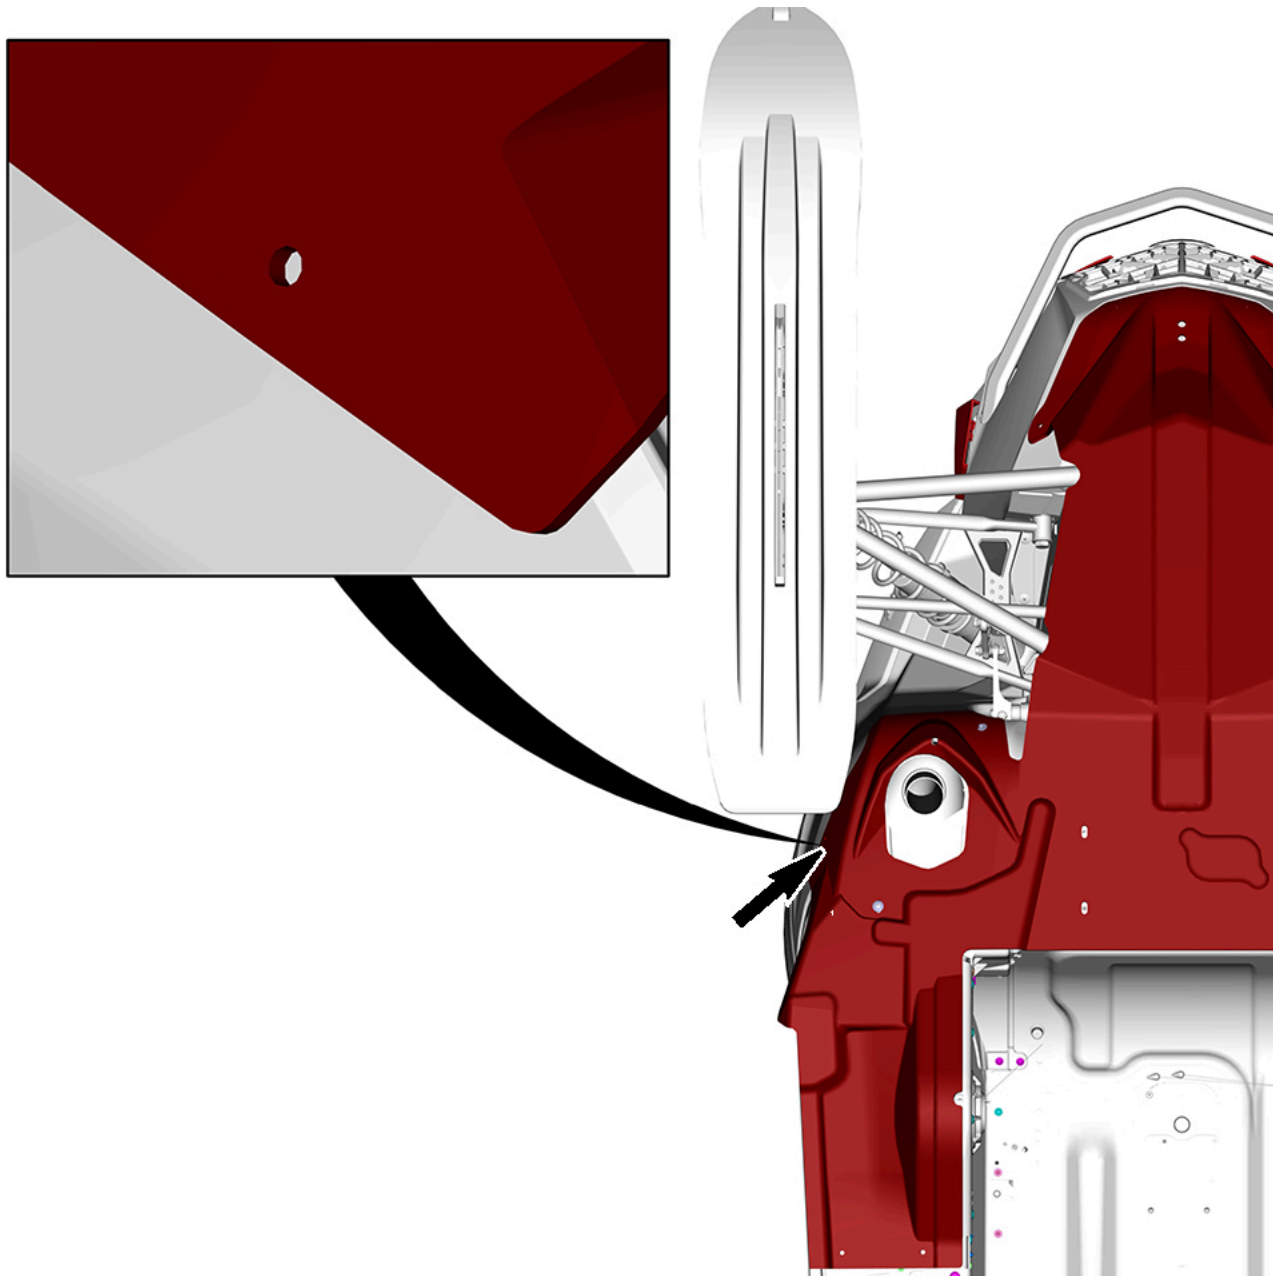

860202991 & 860202992 Kits

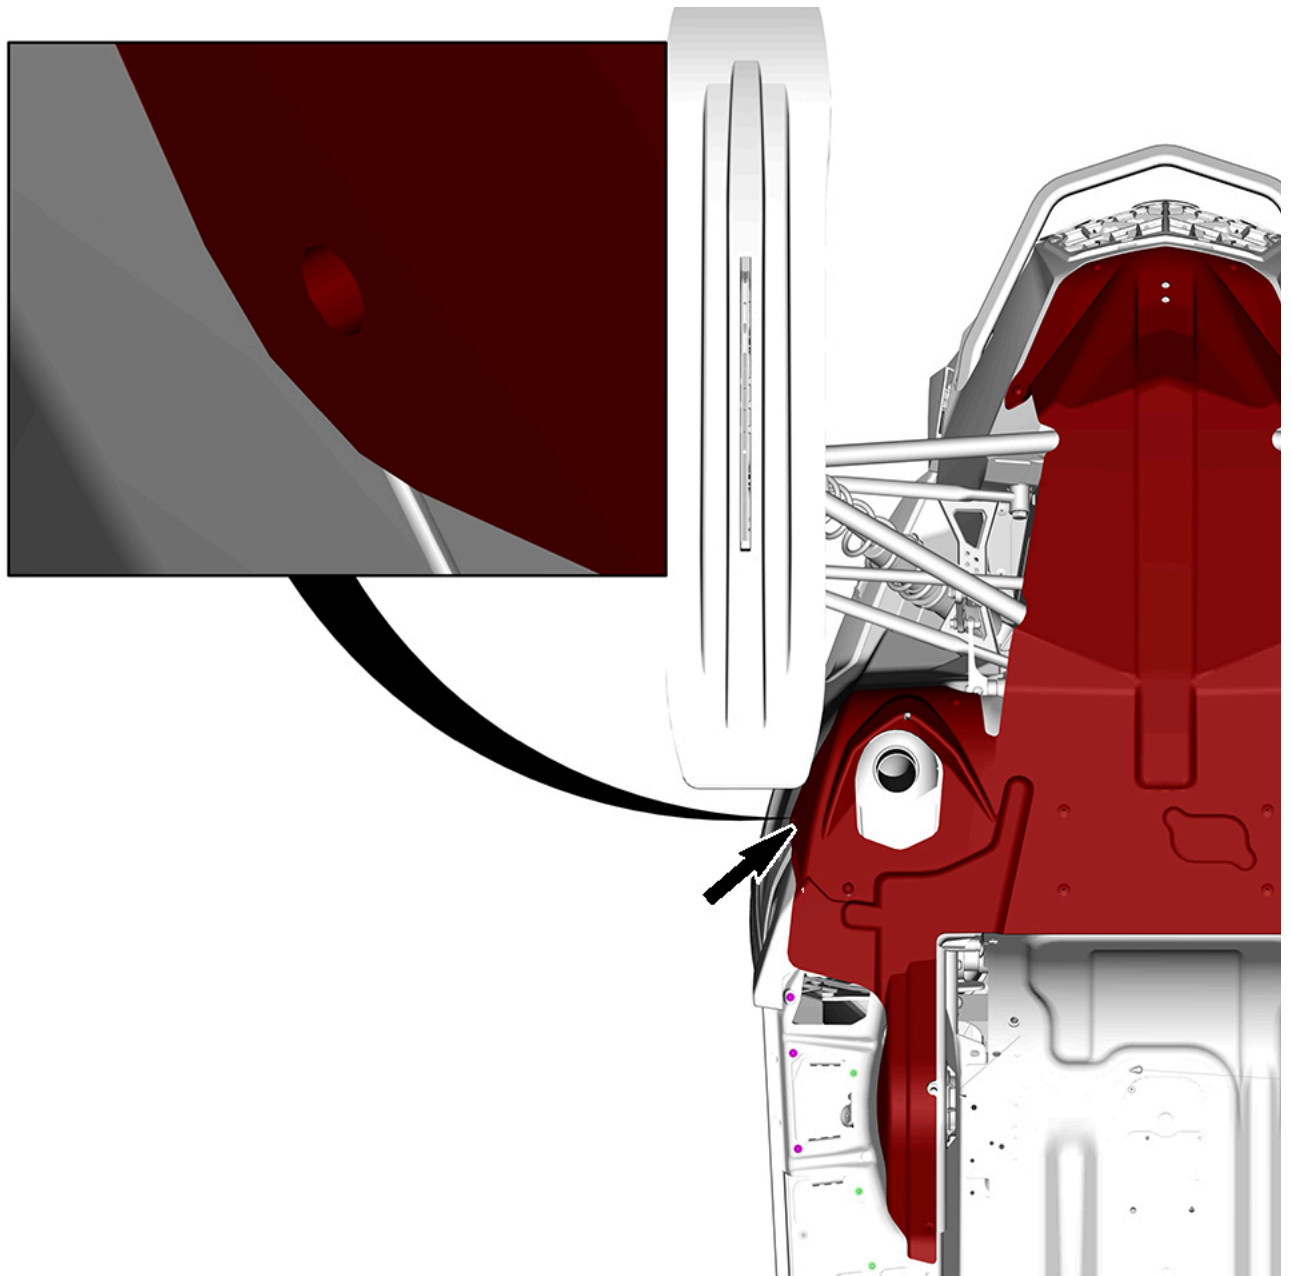

860202971 Kit

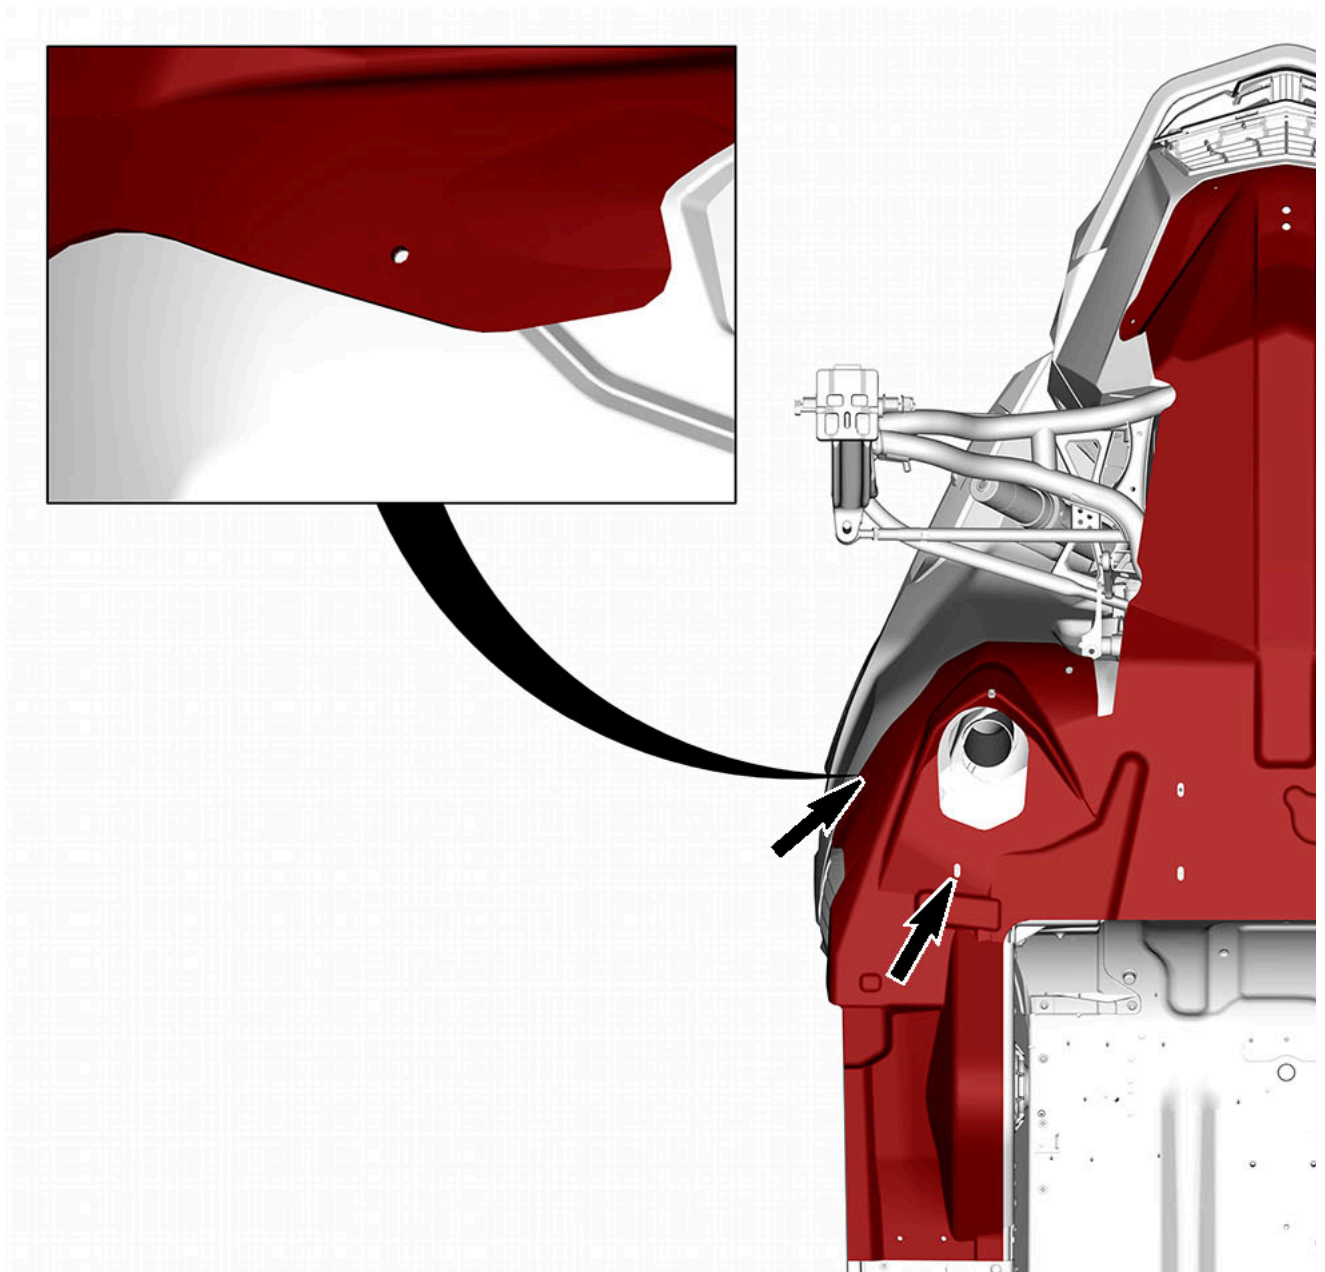

860203048 Kit

6. Use a 5 mm (3/16 in) drill bit to drill marked holes, then drill the same holes with a 9.2 mm (23/64 in) drill bit.


 Note

DO NOT drill too far to avoid damage on other components.


7. Install the M5 Jack nuts [P3] with a rivet gun [T4].

NOTICE


- **DO NOT** compress the crimp nuts too much. Try to do the interior visible nuts first. With this method, you will feel the good compression for the installation.
- **DO NOT** try to install the Jack nuts with a rotation movement, there is a risk of damage on the skid plate.

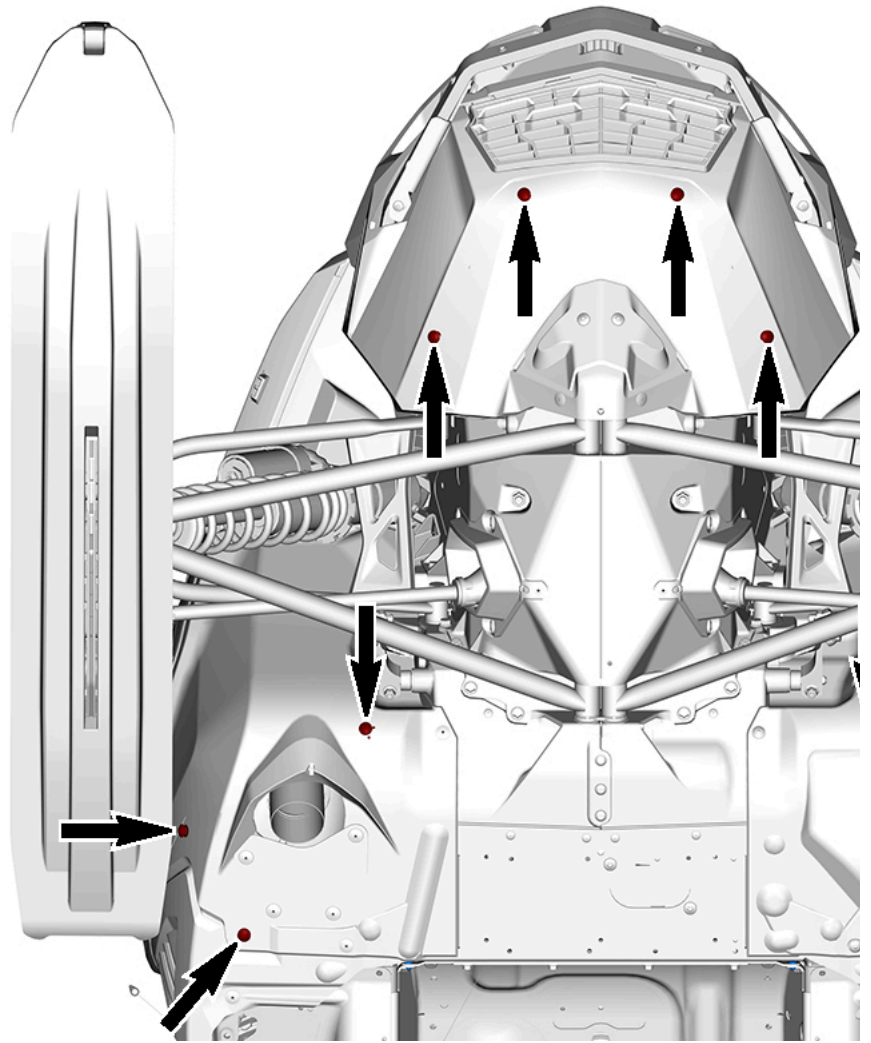

8. Install the skid plate [P1] and mark the indicated holes, then put the skid plate away.

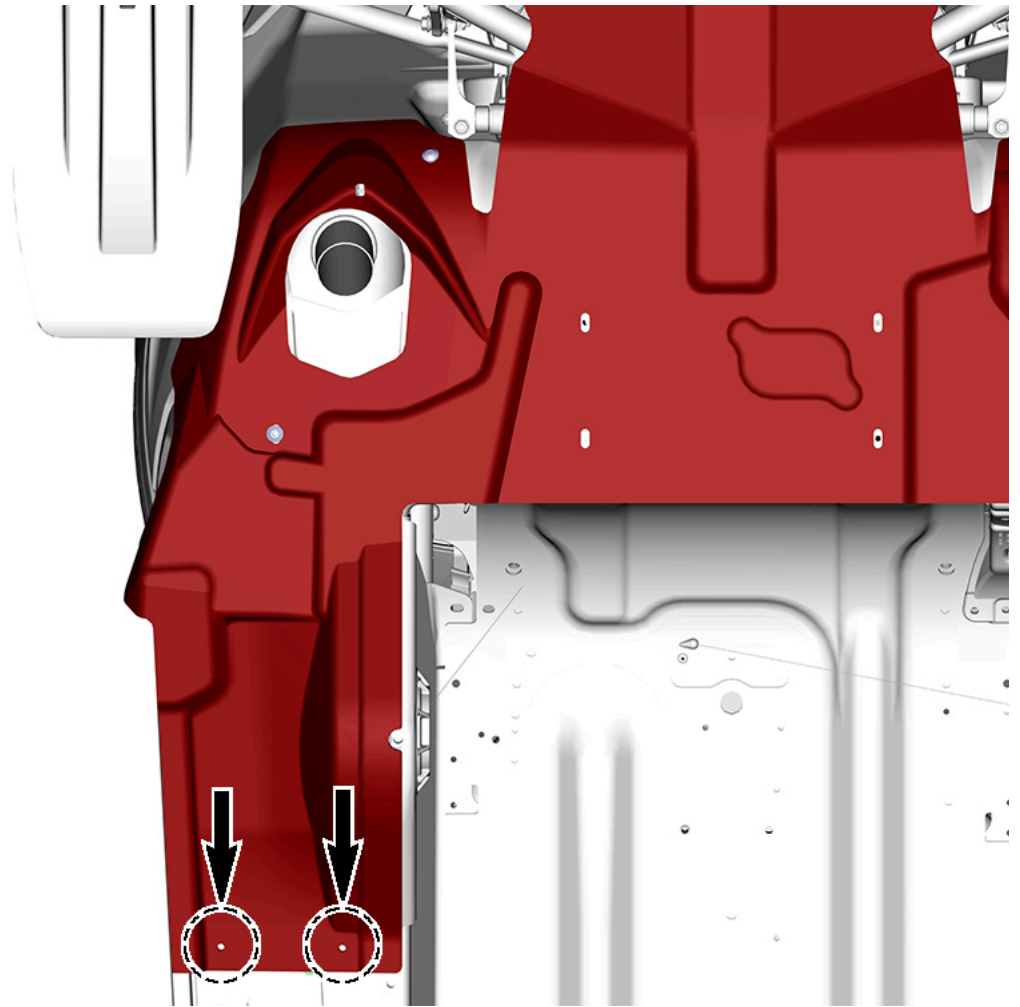


860202991, 860202992 & 860203048 Kits

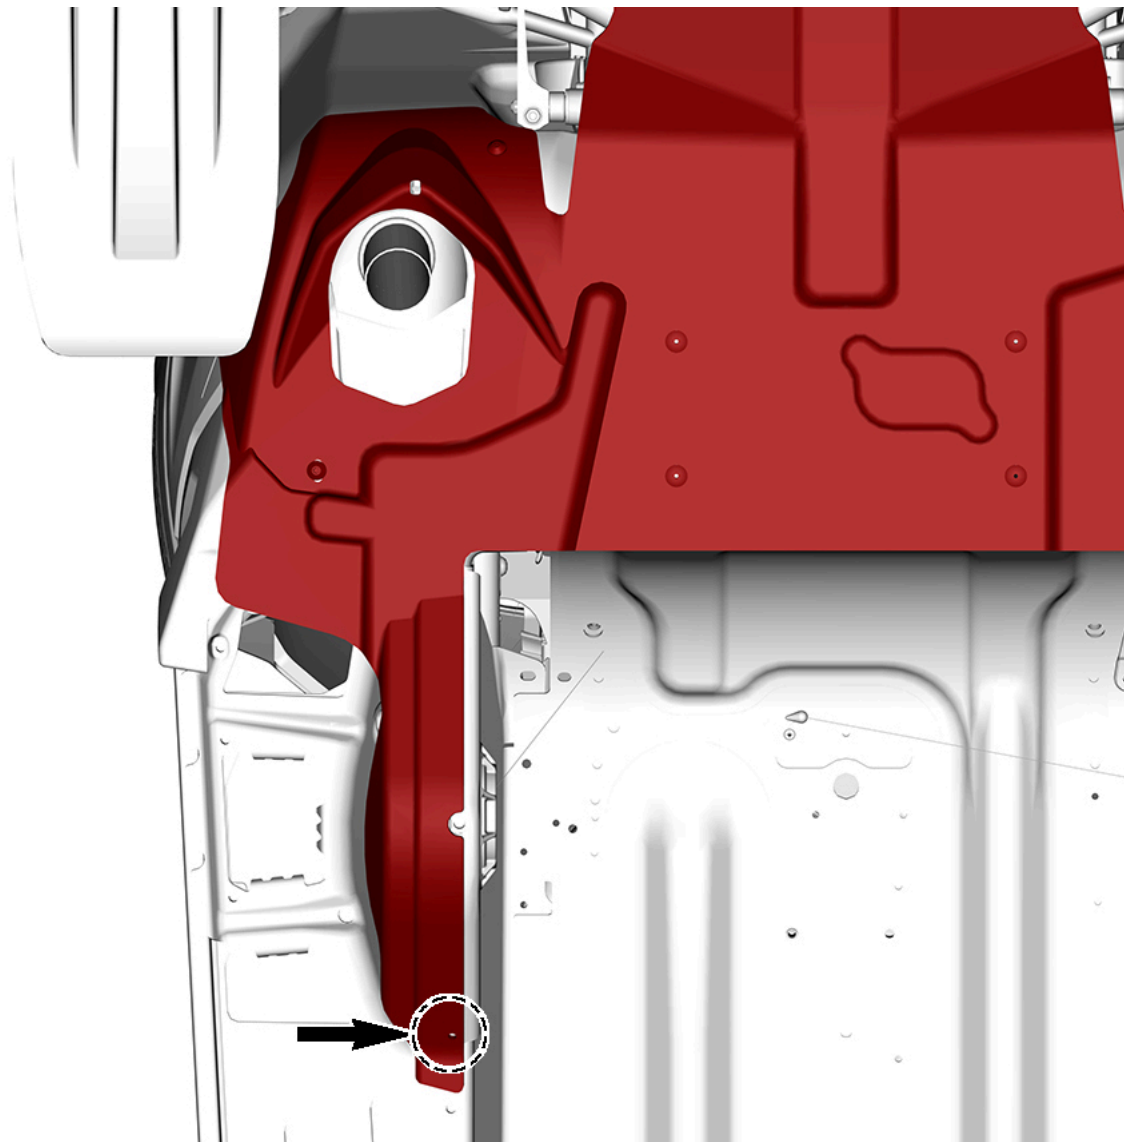


860202971 Kit

9. Drill the previously indicated holes using a 5 mm (3/16 in) drill bit.
10. Install the skid plate using 3/16 in rivets [P2] .

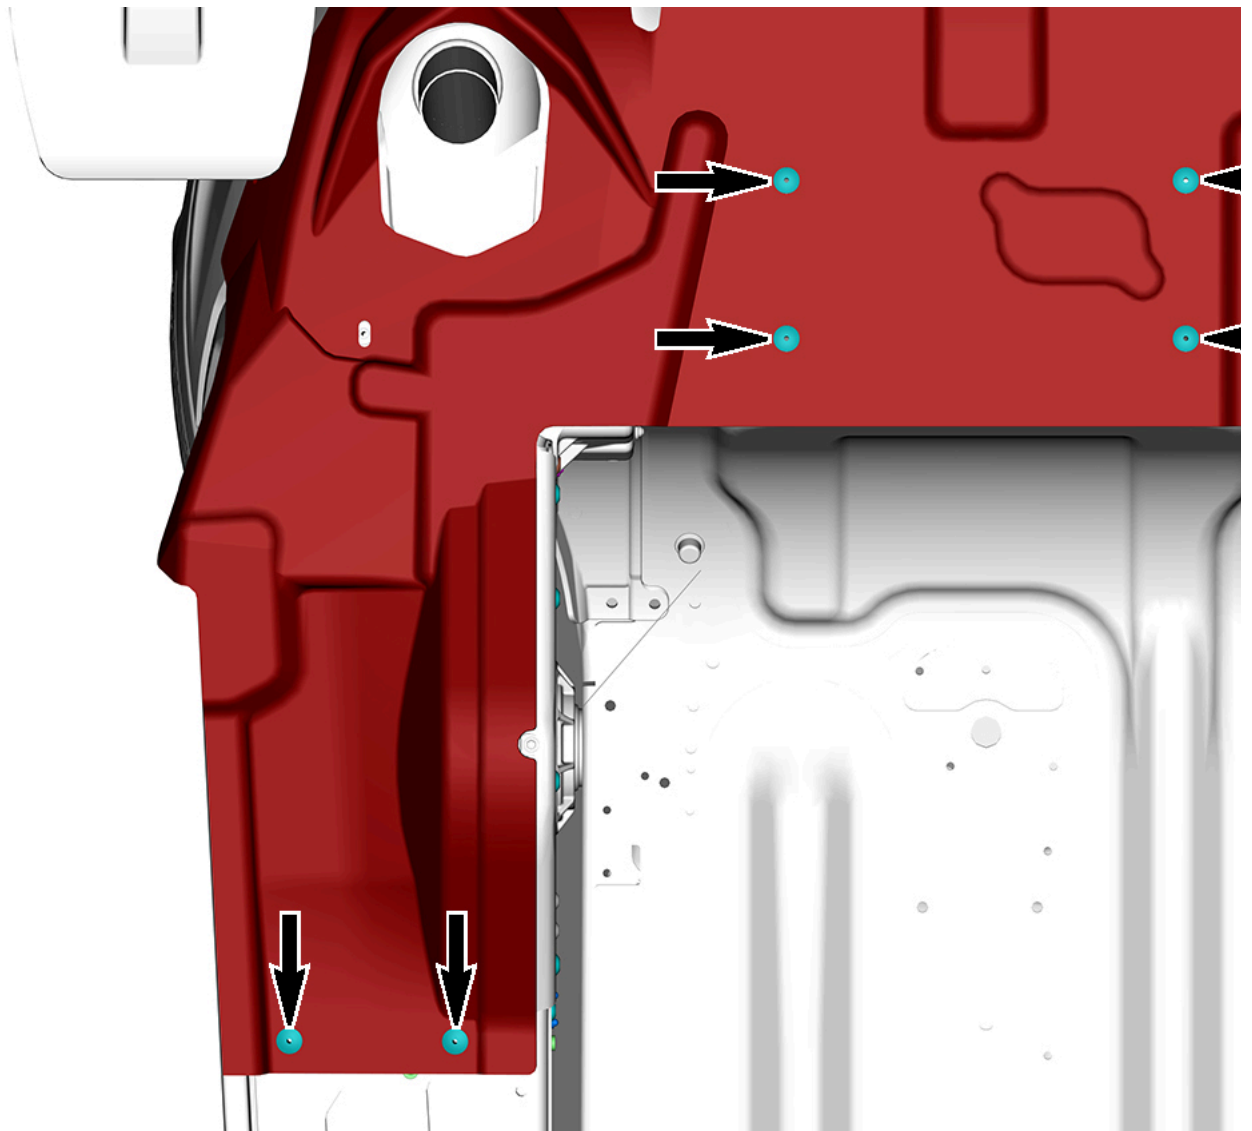


860202991, 860202992 & 860203048 Kits

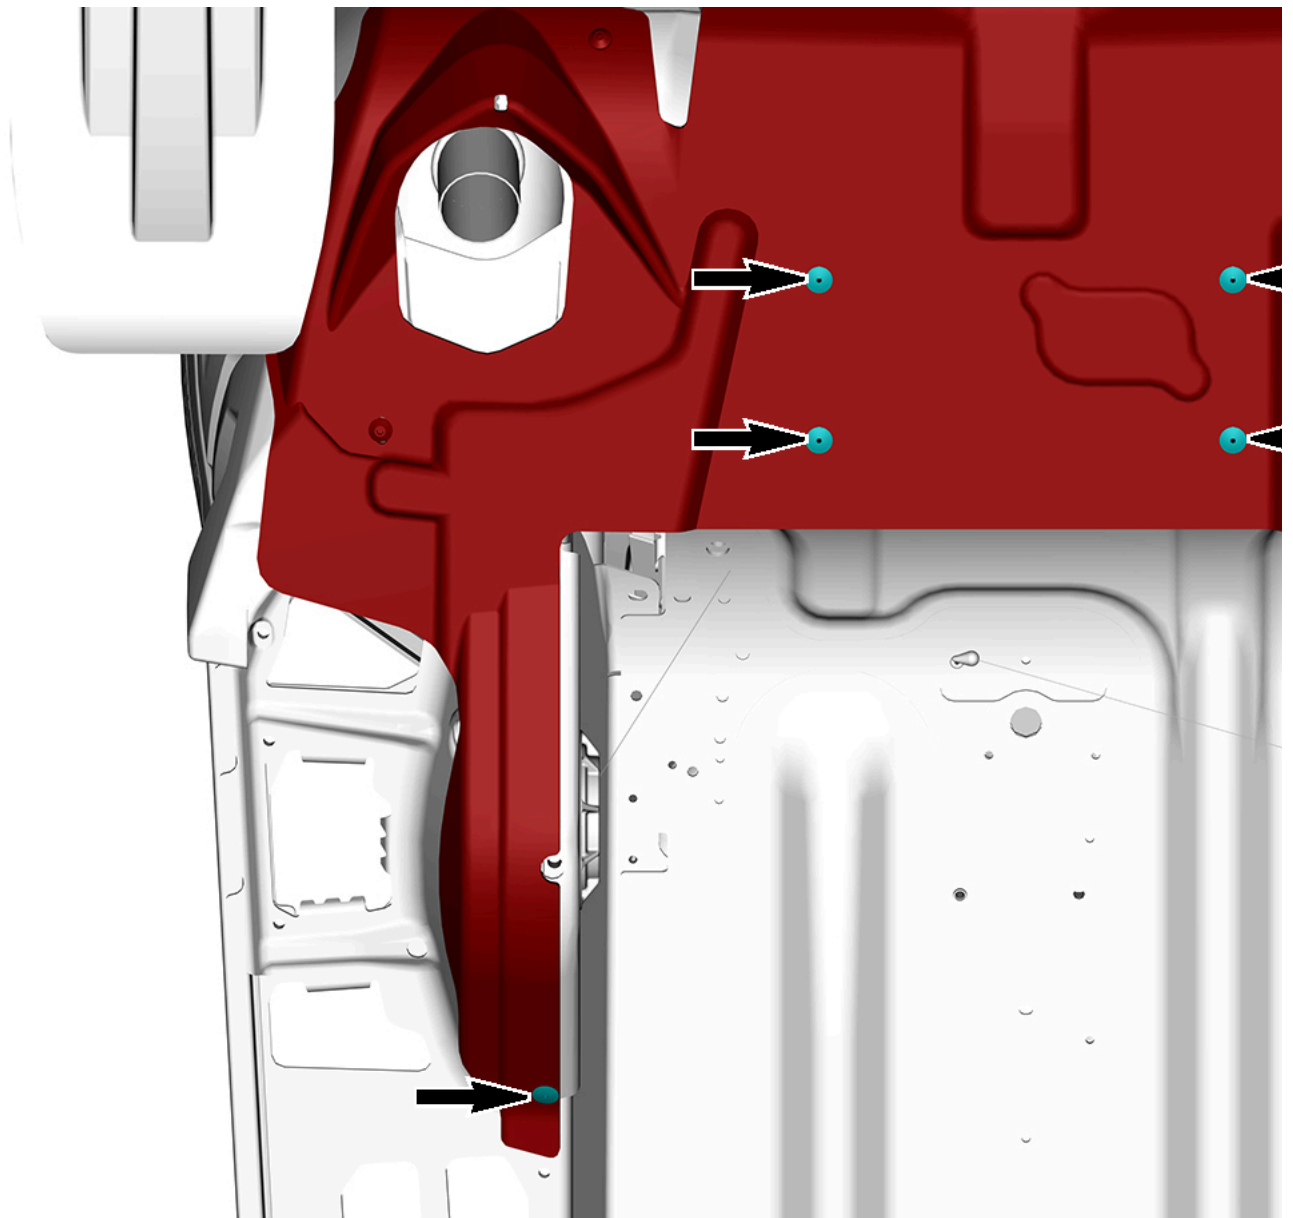

860202971 Kit

11. Затяните все винты Torx M5 X 14 [P4] в соответствии со спецификацией.

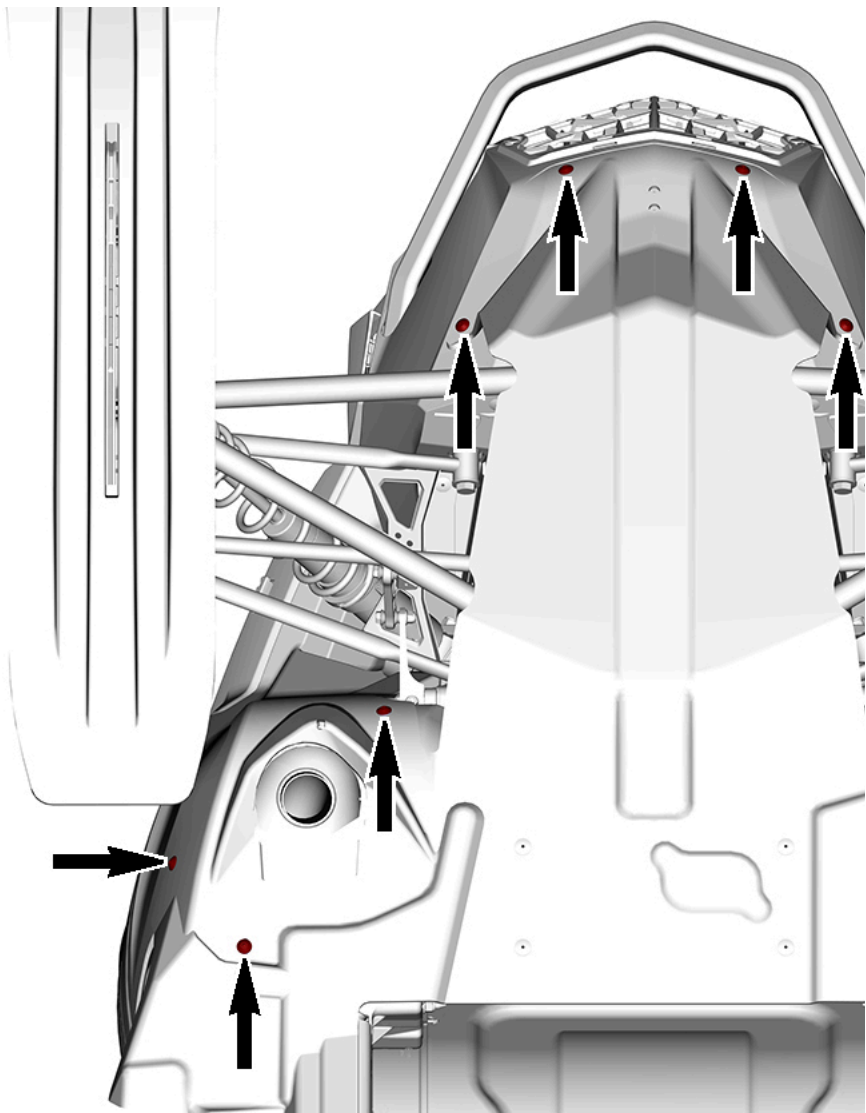

Момент затяжки	
Винт Torx M5 X 14 [P4]	2 ± 0,2 Нм (18 ± 2 фунта•дюйм)

✎ <i>Примечание</i>
В комплекте могут остаться лишние материалы, так как его больше, чем необходимо.

12. Установите на место передний бампер (806202714) (см. инструкцию 487804016) или передний бампер 860202817/860203011 (см. инструкцию 487804221).

